

DATE REQUESTED BY

DATE RECEIVED BY

Approved For Release 2007/07/25 : CIA-RDP78B04747A000500070001-5 BY

998145-S

ASSIGNED TO

STATINTL

DATE ASSIGNED BY

Rost 13 Jan 65

DUE DATE

PROJECT ACT

DUE DATE

DATE COMPL

% COMPL

① Test & evaluate the 2 prototype Richardson Viewers, the NRI Vancian Viewer, and the NRI Reader.

② Prepare a report comparing the various viewer functions (as compared to the measurement function of the reader) and ~~outline~~ ^{outline} the best features of each machine.

Declass Review by NIMA/DOD

CONTRACTOR

CONTRACT NO

TYPE

CONSIGNEE

CLASSIFICATION

TOTAL COST

PROPOSAL RECEIVED

STAFF STUDY COMPLETED

SENT TO TDC

TDC ACTION

EX DIR APPROVAL

CONTRACT DATE

ESTIMATED COMPLETION

COMPLETION DATE

STATINTL

PROJECT TITLE

Approved For Release 2007/07/25 : CIA-RDP78B04747A000500070001-5

NRIC EM-30A/1.64

Manufacturer

Model & Type

Prod Prot
Serial Nr

Burlington Mass
Site of Test

9-10 Feb 65
Date

Rear Proj Multi format Viewer
Model & Type (AMS)

1. GENERAL INSPECTION.
Test personnel shall be thoroughly familiar with applicable specifications, and items not specifically noted in this schedule shall be checked and discrepancies noted. Make a general inspection of the unit paying particular attention to workmanship and general appearance. Check interior and exterior surfaces, electrical wiring, transports, control panel, etc., for compliance with specifications. Make comments below:

For the following tests, measure and record the test conditions at the time of the test:

Line voltage (at lamp) ~~118~~ 117 VAC

Temperature

Relative Humidity

~~118~~ 117 VAC
65 wet 78 dry
OF

48

A. Light Test

1. With an open film gate and the brilliance control at maximum, take light intensity readings with a calibrated Photometer at the points indicated by the sketch below (points 1 thru 9) for each of the magnification ranges:

Polacoat 15

screen

Polacoat LS60G

2	3	4
1	9	5
8	7	6

	3 x 6 dark known screen	6 x 12	12 x 30	30 x 60	
1	130.11 72	62.51 38	27.82 18.6	24.8	14.5 19.7
2	116.88 70	56.44 37.2	27.59 17.2	25.2	15.7 19.7
3	117.94 72	66.48 42.7	31.22 19.3	27.9	17 19.3
4	114.97 63	62.45 36.3	33.82 18.7	30.0	16.7 18.5
5	121.98 63	69.53 39	33.12 17.5	30.1	15.4 21.2
6	125.13 60	74.68 38.4	34.82 17.2	31.6	14.7 25.8
7	136.140 58	75.76 41.3	33.03 17.2	30.0	14.8 28.2
8	132.132 71	67.67 37.6	28.82 15.1	26.4	14 25.8
9	145.114 82	84.61 49.4	35.62 20.5	31.3	17.2 23.5 Can't traverse to extreme

2. In all magnification ranges, traverse to both extremes and check for evidence of color fringing over the entire screen. Make comments below as to the degree of color fringing, if any, and in which magnification range(s).

There ~~is~~/is not evidence of color fringing on the screen.

3. In all magnification ranges, check for evidence of "hot spots" over the entire screen. Make comments below as to the degree of hot spotting and in which magnification range, if any.

There ~~is~~/is not evidence of "hot spotting" on the screen. With cardboard shields in place, no problem. Were not able to traverse to full extreme but it appears there'll be no problem with shields.

time change Magnification - 2 -

3-6 - 13 sec 30-3 = 13 sec
6-12 - 13 sec 3-12 = 12 sec
12-30 - 13 sec

B. MAGNIFICATION & DISTORTION TEST

1. Place a calibrated grid of approximately 0.2" spacing in the film gate and clamp. Determine the length that each side of the projected grids should be by multiplying the actual grid spacing by the magnification range as engraved on the selector buttons, and record in the space below. Make 16 random measurements of the projected grid lines, 4 in each quadrant, in each magnification range. Half of these measurements should be in the X direction and half in the Y direction; record measurements below.

Calibrated grid of 5 mm spacing.

Grid lines at X
 Grid lines at X
 Grid lines at X
 Grid lines at X

IV	I
III	II

2. Measurements: all mm

	<u>3</u> X	<u>6</u> X	<u>12</u> X	<u>30</u> X
Quad I	15.7 X 15.7 X 15.7 Y 15.7 Y	X = 30 - X = 30 - Y = 30 - Y = 30 -	X = 59 - X = 59 Y = 59 - Y = 59 -	X 149 Y 149 -
Quad II	X = 15.7 X = 15.7 Y = 15.7 Y = 15.7	X = 30 - X = 30 - Y = 30 - Y = 30 -	X = 59 X = 59 - Y = 59 - Y = 59 -	X 149 - Y 149 -

	3x	4x	12x	30x
Quad III	$X = 15.7$ $X = 15.7$ $Y = 15.7$ $Y = 15.7$	$X = 30 -$ $X = 30 -$ $Y = 30 -$ $Y = 30 -$	$X = 59 -$ $X = 59 -$ $Y = 59 -$ $Y = 59 -$	$X = 149 -$ $Y = 149 -$
Quad IV	$X = 15.7$ $X = 15.7$ $Y = 15.7$ $Y = 15.7$	$X = 30 -$ $X = 30 -$ $Y = 30 -$ $Y = 30 -$	$X = 59$ $X = 59 -$ $Y = 59 -$ $Y = 59 -$	$X = 149 -$ $Y = 149 -$

3. Magnification: Compare the average of the projected grid line measurements with the "Grid lines at ___X" length (determined in B.1. above) to determine conformance with magnification specifications.

Does/~~Does not~~ conform with magnification specifications in all X, ___X, ___X, ___X.

4. Distortion: Compare the projected grid line measurements with the "Grid lines at ___X" length (determined in B.1. above) to determine conformance with distortion specifications.

Does/~~Does not~~ conform with distortion specifications in all X, ___X, ___X, ___X.

5. As a final distortion test, make a visual check of the entire screen to determine the presence of any distortions not discovered in performing the above tests, i. e., curved grid lines, wavy grid lines, etc. Make comments below:

Very good - no apparent distortions.

B. RESOLUTION TEST

1. Place a Standard High Contrast Air Force Resolution Target in the film gate and apply clamping. Make 5 readings of the minimum readable targets at each magnification setting, one in each quadrant and one at screen center, record readings below:

	Cntr	I	II	III	IV
<u>3</u> x	40.32	35.84 40.32	35.84	32	40.32
<u>6</u> x	57.28	57.28	40.32	57.28	57.28
<u>12</u> x	101.76	101.76	101.76	101.76	101.76
<u>30</u> x	229.12	229.12	203.52 229.12	229.12	229.12

2. The brilliance control should be left in the maximum position throughout the entire test - preferably for at least 8 hours without shut-off during breaks in the test schedule. Test should start with a new lamp and should burn-out occur, record the time on the lamps used for the test. At the end of the test, check all optical elements for heat damage - check lamps for bulges and swelling.

III. FILM TRANSPORT TEST

A. Film Degradation Test: Load a roll of 9½" standard base film which is free from any scratches or gouges, i. e., straight from the photo lab and in new condition. Scan and slew in both directions 60 times (30 times each way) with frequent stops and starts within a 10 to 20 foot marked segment of the film. Check this segment of film at the highest magnification for evidence of degradation.

The film is/is not appreciably degraded - make statement below as to seriousness of degradation, if any.

B. Film Drive Test

Load a full 8" diameter reel of standard or thin base film and scan or slew throughout the entire length. Also, scan and slew back and forth several times at or near each end of the film to determine that operation of the film drive is in accordance with Film Drive Specifications.

The unit ~~will~~ will not satisfactorily "handle" full reels of film throughout the entire length. Make comments below: Sporadic and jerky image motion thru out roll even at 3x. Worse at end of reel while scanning toward empty reel. Rollerless rollers will not accept splice & thin base 9½"

2. Time the movement of a known length of film (15' or so) scanning at the slowest possible speed and at the highest magnification. Record the speed below. Repeat the test for the fastest scan speed and record the speed below. While in the slow scan speed, check for noticeable jerking or sporadic movements of the projected image. Slew an entire roll of film from one side to the other and record elapsed time below.

Slowest scan 0.18 inches per second 6.5 or 12 inch (9/2)

Fastest scan 1.09 inches per second 11 or 12 inch (9/2)

(All Std film) Slew ____ * film 1' 17" minutes/seconds

There is ~~is not~~ noticeable jerking or sporadic movement of the projected image at the highest magnification. Comments: Considerable sporadic image motion and jerky image motion ~~at~~ discernable at even lowest magnification. Considerable "looping" of film at direction change. Film coasts 3 full frames at stop.

3. Repeat the test in paragraph 1 above using 9 1/2" Thin Base film. Same as above. A splice in thin base film will not negotiate the rollerless rollers without malfunction and/or tearing. No apparent change necessary in torque adjust from Std base.

4. Repeat the test in paragraph 1 above using 70mm St'd film. Requires an adjustment of the torque - present system is screw-driven adjustment on electronic chassis.

IV. GENERAL OPERATION: While performing the above tests, all controls and operations should be thoroughly exercised and controls should be placed in every conceivable combination to check safety interlocks in the equipment. Make statements below as to proper operation of all functions.

A. Lateral Drive. (Extreme to opposite extreme, * seconds) Much too fast at 30x - coasts to a stop. Joy stick very stiff and hard to actuate.

B. Film Motion Control. A little too loose and easy to move - other than that, feels good. Slips into slew little too easily should ~~be~~ require more travel after meeting the resistance before micro switch trips. Slew coasts to a stop - 3 frames

C. Magnification Selection. (Elapsed time for ~~worse~~ ^{all} changes, 13 secs) Brand x type illuminated push buttons, fairly high intensity

D. Illumination Control. Variac looked up for line voltage at max. Better to look up to get 135V at max with red area from 115 to max.

E. Fine Focus. Agonizingly slow all mag ranges - automatically changes rate with mag selection (good idea)

F. Scan/Slew Mode Selection. Similar to Itek QRC 176 - on joy stick. A variac controls slew speed from off to max (good)

G. Other. (List controls tested and make comments)

ROTATION - reversed from knob direction. Hangs up if stopped, reverse direction for a few degrees and then will continue in former direction - both directions. Rotates "exactly" 180°. Has continuously variable speed of rotation. Has auto centering.

from center to extreme manual	- 19 sec
" extreme to center auto	- 19 sec

V. GENERAL: Personnel conducting tests should note below any comments regarding opinions on workmanship, machine suitability to the mission, machine strengths, machine weaknesses, etc. Make a lamp change and comment on the ease/difficulty of this operation.

a. The unit has a fan blowing directly on the film plane and the anemotherm heat test would probably not be conclusive. A 3.0 density film was placed in the light path at 30x for one hour. Very little deformation was noted while in the light and the film was completely undistorted after a few seconds.

Tests performed by: _____
Name Title

Mailing Address Telephone

Rotation -

Direction reversed - "hangs" up if stopped, reverse the direction for a few degrees and then continue in former direction it will move. True in both directions - may be lack of sufficient starting torque.

Stage rotates "exactly" 180° in each direction - should be in neighborhood of 190° or so.

Continuously variable (speed) of stage rotation. (GOOD)

Slew

Going into slew similar to 70 mm - speed control ^{STATINTL} control variable with rotating knob control.

Upon going from slew to neutral on joystick, film "coasts" 3 frames before stopping.

($9\frac{1}{2}$) Significant "looping" of film on stopping and starting slew mode.

↑

Scan (9 1/2") Sporadic and jerky image motion - bad - . Caused by "noisy" servo amps AND film riding on platen (static). Worse at the end of a roll while scanning toward empty spool.


Same on other end

says that they are sure this can be "tuned" out.

Rollerless rollers will not accept spliced thin base 9 1/2" film without malfunction

70 mm - very jerky image at 12x worse at 30x naturally

STATINTL

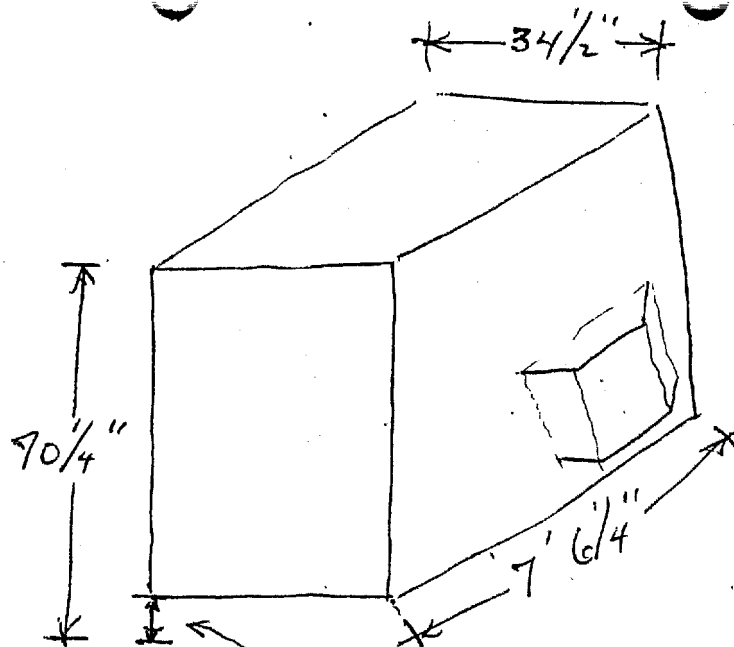

$5\frac{7}{8}"$ clear when on wheels.

5" castored wheels

$4'-\frac{1}{4}"$ including
"bay window"

Screen size
 $30\frac{1}{2}" \times 30\frac{1}{2}"$
 $\frac{1}{4}"$ covered by
rubber gasket
all around
30 x 30 clear